


# ASSEMBLY INSTRUCTIONS

## *MIKKEL FURNITURE COLLECTION*

---

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Hardware and Furniture Parts List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.



---

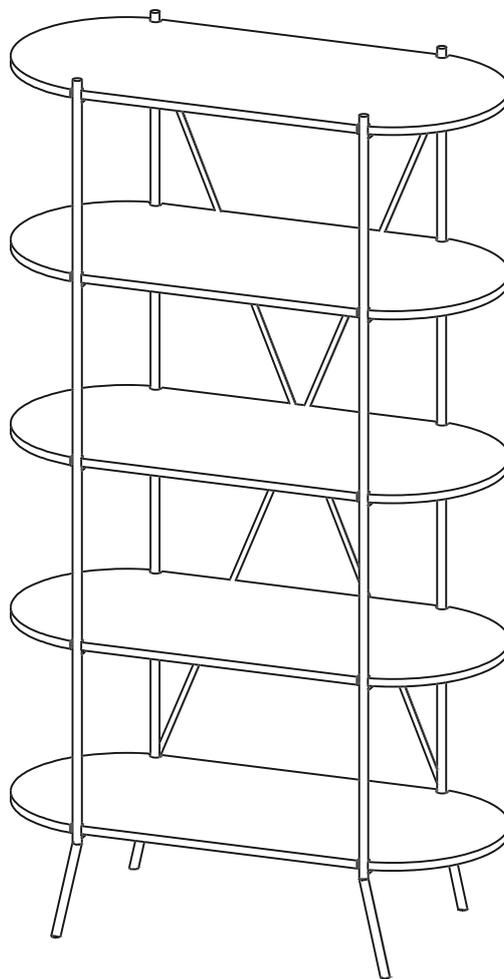

# ASSEMBLY INSTRUCTIONS

## *MIKKEL FURNITURE COLLECTION*

### Component List

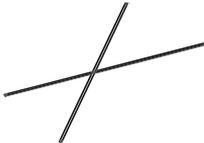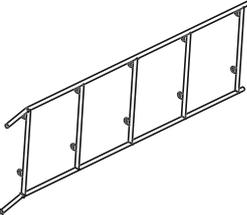Label	Picture	Description	Qty
A		Shelf	5
B		Back Metal Brace	2
C		Metal Frame	2

### Hardware List

Label	Picture	Description	Qty
H1		Small Allen Bolt 6 x 10 mm	4
H2		Large Allen Bolt M6 x 16 mm	20
H3		Flat Washer M10 x 24 mm	20


### Tool List

Label	Picture	Description	Qty
T1		Allen Key 4 mm	1

### Assembly Prep

Before Beginning:

- \* Save all packaging until finished.
- \* Read Instructions, cover to cover.
- \* Have 2 adults on hand for assembly.

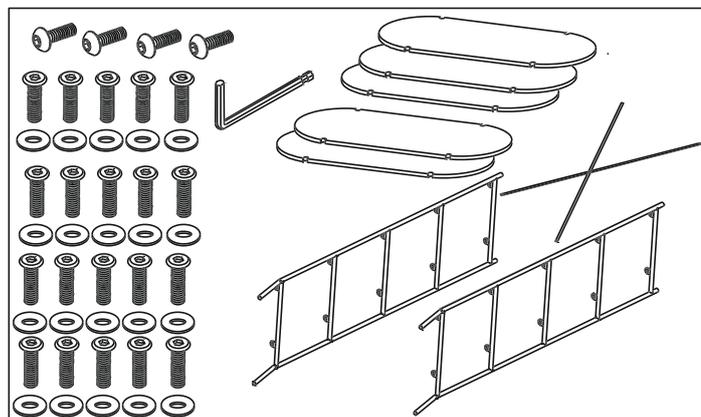


# ASSEMBLY INSTRUCTIONS


## *MIKKEL FURNITURE COLLECTION*

### Assembly Steps


Step 1 : On a soft surface, such as a rug, attached back metal brace to metal frame

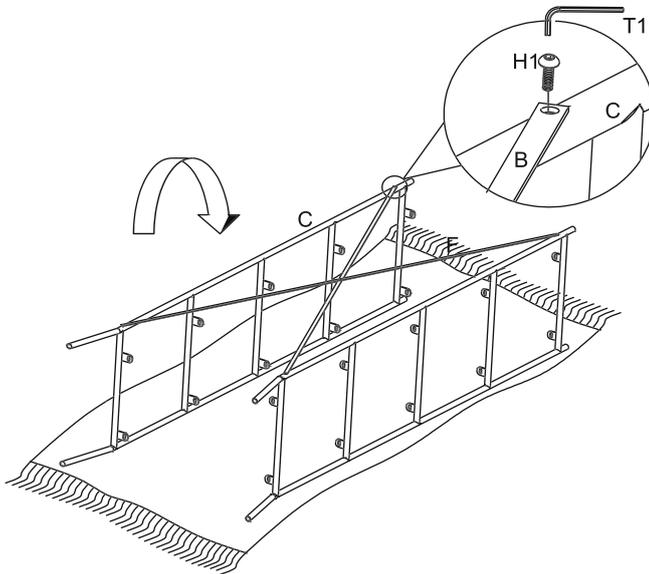

Step 2 : Using care, turn metal frame and back metal brace over

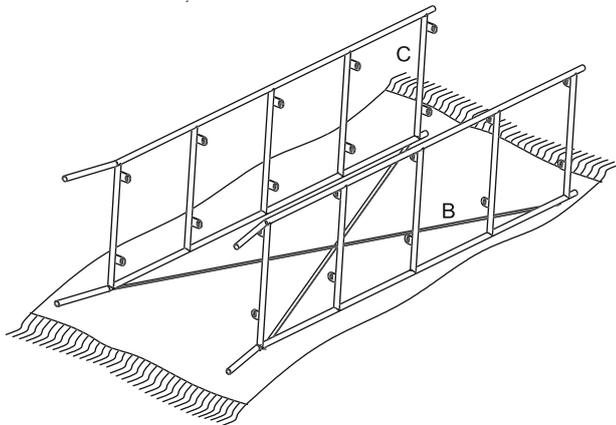


Step 3 : Attached centre shelf first and screw in, then attach remaining shelves

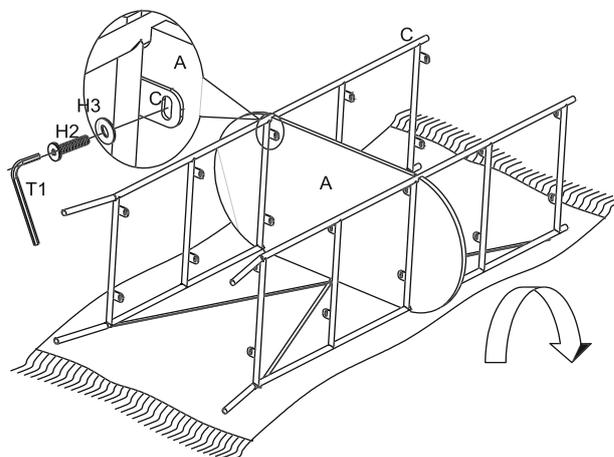


ASSEMBLY INSTRUCTIONS  
*MIKKEL FURNITURE COLLECTION*

Assembly Steps

Step 4

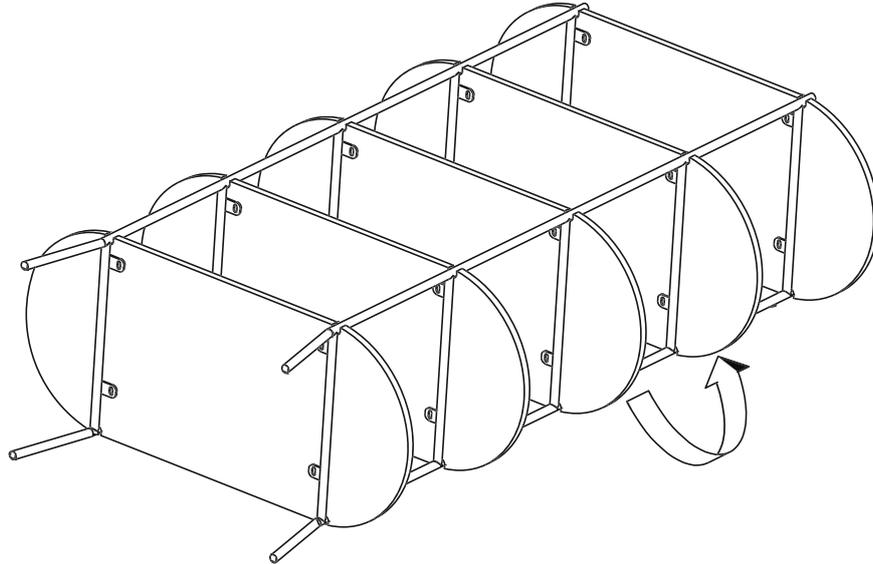

Step 5

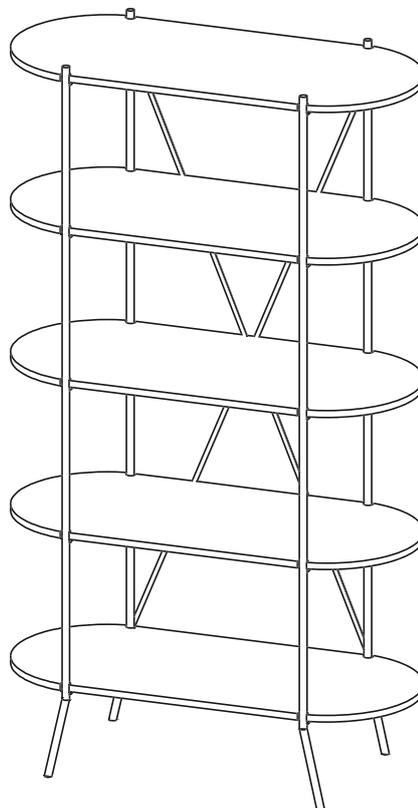

# INSTRUCTIONS FOR SAFETY ANCHOR



## WARNING:

**It is STRONGLY RECOMMENDED that you ANCHOR this product .**

Toppling furniture can cause serious injuries and death.

This product has been fitted with an anchor bracket. To prevent your furniture from tipping forward it is strongly recommended that you **securely attach this product** to a wall or other solid surface, using the anchor straps/brackets provided and appropriate fixings. Screws to fix into the wall are not included. Please purchase suitable screws from your local hardware store taking into consideration the material and thickness of the wall.

## IMPORTANT:

**Regularly check** that anchors are securely maintained.

Use safety **drawer locks** to prevent children climbing.

Stability of tall items may be affected by thick pile carpet or uneven floors.

**Do not** place unanchored televisions on furniture.

 
## CAUTION:

For your safety when attaching the anchor fixings, please note the following:

- Check for any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)
- Walls are constructed from different materials, for example, masonry (solid brick) or plasterboard lined cavity walls (hollow). It is important that you use the appropriate wall fixings for your wall type.
- Your local hardware store will have the necessary drills and fixings and can offer advice if needed. If in doubt, engage the services of a qualified tradesperson to install and anchor the product.

# SAFETY ANCHOR ATTACHMENT

## Hardware List

Part	Picture	Description	Qty
A		Wall Bracket	2 Pcs
B		Strap	2 Pcs
C		Stud Mounting Screws	4 Pcs

Bracket supplied in hardware kit to be fixed to the wall with screw (before attaching, please check with your local hardware store if screws supplied are suitable for the type of wall surface you intend on attaching to.)

Align the pre attached bracket on the furniture with the bracket on the wall. Thread and strap through the bracket shown and tighten.

### Example of attachment to wall:

