



 



Beach Cabana Instructions


ARTWORK SPECIFICATION TABLE	DATE : 31 MAY 23	COLOURS CMYK PROCESS COLOUR
ARTWORK DIMENSION : 210mm x 148mm	DESIGNER: ASH H	  PROCESS COLOURS DIELINE
PAPER SUBSTRATE: AS PER EXISTING		 COOL GREY 10C
FINISHING UNCOATED		
All measurements are in mm. The dimensions and notes are not to be printed		
ARTWORK PAGE - SCALE @100%		




210mm




HOW TO SET UP YOUR BEACH CABANA




Step 1: Begin by holding the side handles of the sand anchor and twist the anchor into the sand until the bottom of the handles sit on top of the sand.

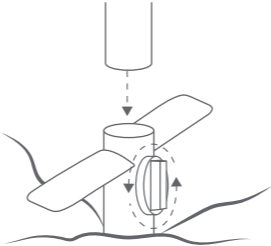


Step 2: Untwist the knob on the sand anchor to allow the center pole of the cabana to be inserted to the anchor.

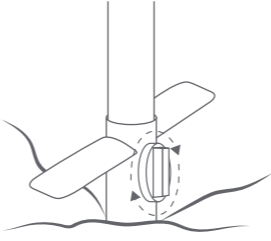


Step 3: Insert middle pole into sand anchor, then twist and turn the knob of the anchor and lock the center pole into place.

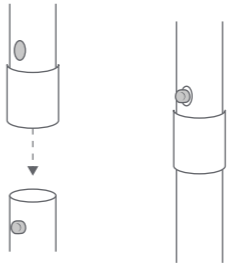


Step 4: Insert the top of the cabana into the bottom center pole and click into place. There should be a little button which pops out once the cabana is secured into the bottom center pole.

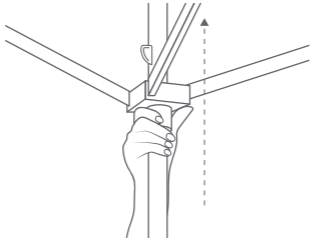

Step 5: Once locked into place, push the clip up under the roof of the cabana in the same motion as putting up an umbrella.

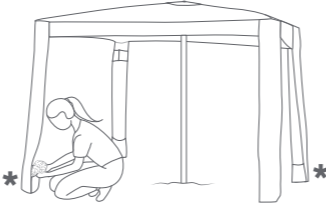


Step 6: Pull out a fabric pillar and fill the pocket with sand. Then open the *opposite fabric pillar and fill with sand. Repeat this for the two remaining corners.

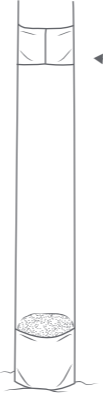


Step 7: Ensure each pocket is filled with enough sand.

Pro Tip: Place your smaller sized collectibles in the specially designed pockets of the fabric pillar for easy access.

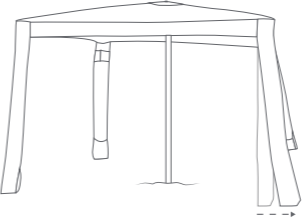

Step 8: You may need to move a sand pocket further away from the center to create stability if the sand is uneven.



148mm