


# SAFETY ANCHOR ASSEMBLY INSTRUCTIONS

## European Collection Adana Timber Furniture Two Drawer Bedside Chest

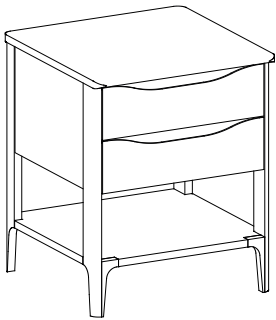

Fix the textile straps (A) using the screws (B) and washers (C) to the back of the product as shown below.

Place your product in the final position. Mark the wall with a pencil where the hole will be drilled. Check for hidden gas and water pipes and/or electrical wiring. Drill holes and fit an appropriate wall plug (not supplied) for your wall type. Screw the straps (A) to the wall.

Choose an appropriate screw to secure. If in any doubt please consult a professional.

### HARDWARE LIST

A		2 pcs
B		2 pcs
C		4 pcs

